


Quick start Instructions

For initial setup of the PEZ-R and RS


IMPORTANT:

To see label on PEZ timer, remove the cover plate from PEZ Processor. Cover is held by tabs on side of cover plate.

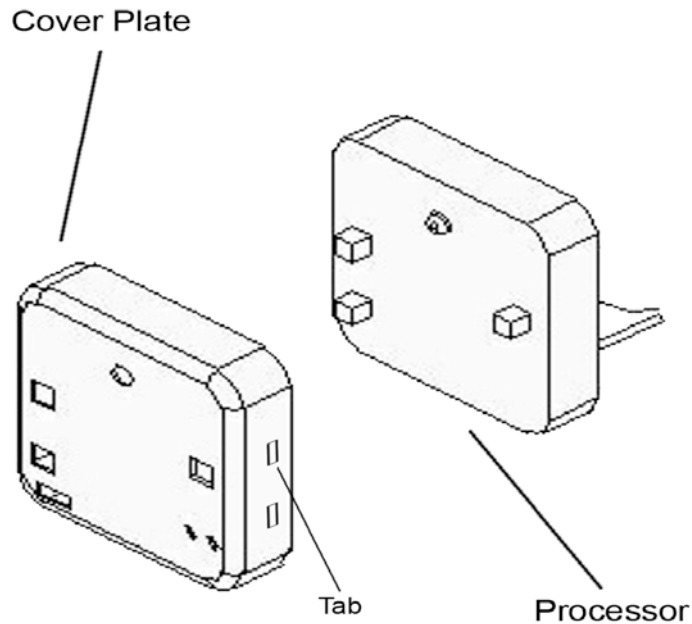

Set Date and Time

1. Press the "Prog" button once. You should now have a dot blinking over "Date/time". Press "Enter".
2. Four digits will be displayed with the first two blinking. Use the up or down arrow to select the day of the month. Press "Enter".
3. The last two digits will now be blinking. Use the up or down arrow to select the month. Press "Enter".
4. The year is now displayed and blinking. Use the up or down arrow to select the year. Press "Enter".
5. Four digits will be displayed with the first two blinking. Use the up or down arrow to select the hour based on a twenty-four hour clock. Press "Enter".
6. The last two digits will now be blinking. Use the up or down arrow to select the minutes. Press "Enter".

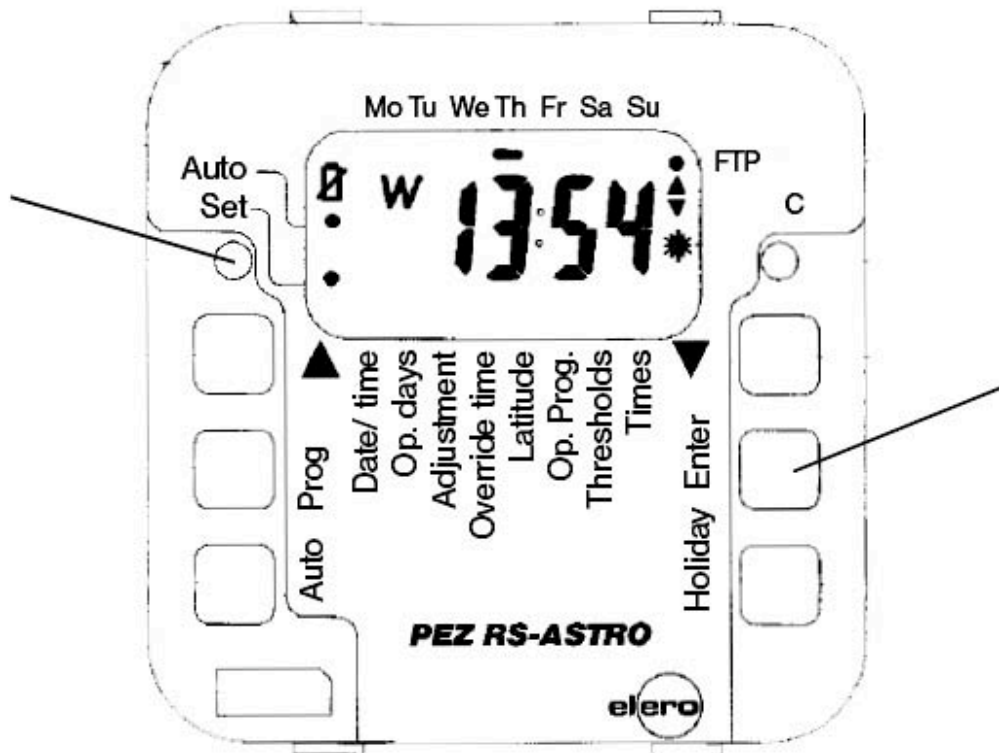

You should now have the time displayed with a line under the day of the week and an “S” or “W” for summer or winter time.

Enter Set Mode

1. Press the “Set” button (upper left side) once. A dot will appear next to the “Set” label on the left side of the display window.

You should now have two dots on the left side of the window. Only the Date/time can be adjusted when you are not in the “Set” mode. All other programming requires entering the “Set” mode.

Adjusting the Summer/Winter time shift

The automatic time shift is set for the Last Sunday in March and the Last Sunday in October. In those areas of the United States where daylight saving time is observed, the change is on the Second Sunday in March and the First Sunday in November.

1. From the normal time display, press “Enter”. The display will have “SW” displayed and “AUTO”.

If your location does not observe daylight savings time

1. Use the up or down arrow to select “OFF” and press “Enter”.

Otherwise, Press “Enter” again and the display will have “S”

and "0". Use the down arrow to change the "0" to "-2". Press "Enter". The display will now show "W" and "0". Use the up arrow to change the "0" to "1". Press "Enter" to accept and return to the normal time display.

Disabling the "Astro Program: (If you do not wish to use it.)

Press "Prog" twice and you will have a dot blinking over "Op. days". Press "Auto". This will erase the days for the Astro Program to operate and it will not operate until it is again programmed.