




Initial setup of the PEZ R and RS

IMPORTANT:

To see label on PEZ timer, remove the cover plate from PEZ Processor. Cover is held by tabs on side of cover plate.

Set Date and Time

1. Press the "Prog" button once. You should now have a dot blinking over "Date/time". Press "Enter".
2. Four digits will be displayed with the first two blinking. Use the up or down arrow to select the day of the month. Press "Enter".
3. The last two digits will now be blinking. Use the up or down arrow to select the month. Press "Enter".
4. The year is now displayed and blinking. Use the up or down arrow to select the year. Press "Enter".
5. Four digits will be displayed with the first two blinking. Use the up or down arrow to select the hour based on a twenty-four hour clock. Press "Enter".
6. The last two digits will now be blinking. Use the up or down arrow to select the minutes. Press "Enter".

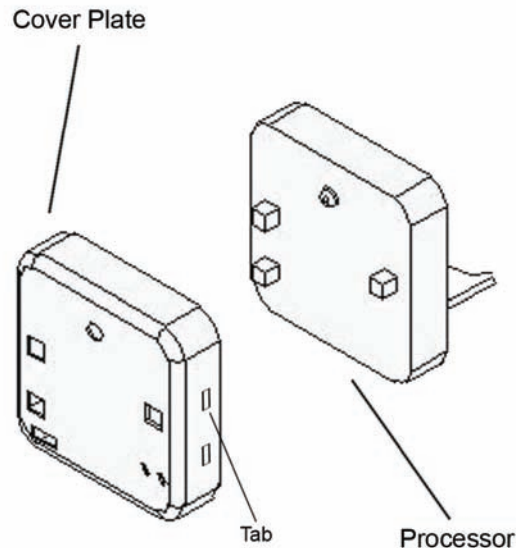

You should now have the time displayed with a line under the day of the week and an "S" or "W" for summer or winter time.

Enter Set Mode


1. Press the "Set" button (upper left side) once. A dot will appear next to the "Set" label on the left side of the display window.

You should now have two dots on the left side of the window. Only the Date/time can be adjusted when you are not in the "Set" mode. All other programming requires entering the "Set" mode.

Adjusting the Summer/Winter time shift

The automatic time shift is set for the Last Sunday in March and the Last Sunday in October. In those areas of the United States where daylight saving time is observed, the change is on the Second Sunday in March and the First Sunday in November.

1. From the normal time display, press "Enter". The display will have "SW" displayed and "AUTO".

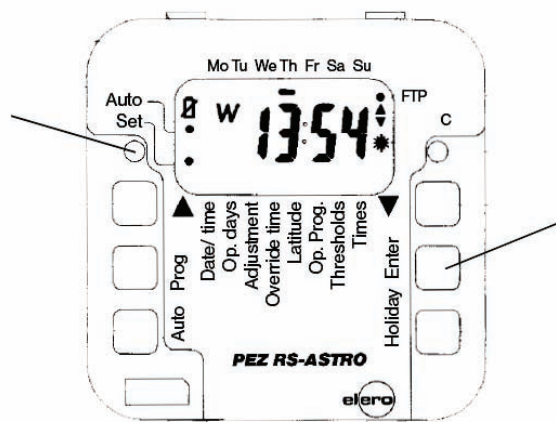

Elero USA, Inc.

10827 Alder Circle • Dallas, Texas 75238 • PHONE (214) 343-1676 • (800) 752-8677 • FAX (214) 342-8528

www.elerousa.com



Initial setup of the PEZ R and RS

If your location does not observe daylight savings time

1. Use the up or down arrow to select "OFF" and press "Enter".

Otherwise, Press "Enter" again and the display will have "S" and "0". Use the down arrow to change the "0" to "-2". Press "Enter". The display will now show "W" and "0". Use the up arrow to change the "0" to "1". Press "Enter" to accept and return to the normal time display.

Disabling the "Astro Program: (If you do not wish to use it.)

Press "Prog" twice and you will have a dot blinking over "Op. days". Press "Auto". This will erase the days for the Astro Program to operate and it will not operate until it is again programmed.

Setting the Operating Program

(see page 19 of instructions)

Enter Programming Mode

Press "Prog" and a dot will appear above "Date/Time".
Press "Prog" five more times until dot appears above "Op. Prog"
Press "Enter"

Select Program Step

You are now at program step "01".

Select Operation Direction

Press "Enter" and a triangle will appear next to the "Up" symbol. This can be toggled between up and down by using the up or down button. Select the operation desired and then press "Enter".

Select Day(s)

A line will appear beneath "Mon" at the top of the screen. If you want the operation to occur on Monday, press "Enter" to select that day. If you do not want to select that day use the up arrow to move to a day you wish to select. Press "Enter" to select that day.

Select Time

After Sunday, the time digits will display with the first two digits flashing. Use the up and down buttons to select the proper hour and then press "Enter". The last two digits will now flash. The minute is selected using the up and down buttons and "Enter" is pressed to select.

Select Program Step

Program step "02" will now flash and you can press "Enter" and repeat the programming steps.

Up to sixteen steps can be programmed. Each step can provide either an up or down operation. Each step can operate on any or all days of the week.

To erase an existing instruction, go to that step and press "Auto".

Exit Programming/Set Mode

After the desired steps have been programmed, press "Prog" to return to current time display and "set" to exit Set mode.